

SLO / CRO / ENG



#MICROGAMING



# PRIDE NANO

## Box Contents

1. UVI Pride Nano - 60 % Form Factor RGB Gaming Keyboard
2. User Manual
3. USB-C Cable

 Navodila za uporabo

 Korisnički priručnik

 User Manual

# Informacije / Informacije / Information

## Informacije

Zahvaljujemo se vam za nakup tipkovnice UVI Pride Nano. UVI Pride Nano je majhna gaming RGB tipkovnica z mehanskimi rdečimi stikali. Za uporabo ne potrebujete gonilnikov.

 
## Informacije

Hvala vam što ste kupili UVI Pride Nano tipkovnicu. UVI Pride Nano je mala gaming RGB tipkovnica s mehaničkim crvenim prekidačima. Za upotrebu vam nisu potrebni driverji.

## Information

Thank you for purchasing the UVI Pride Nano keyboard. UVI Pride Nano is a small gaming RGB keyboard with mechanical red switches. No drivers are required for use.

# Specifikacije / Specifikacije / Specification

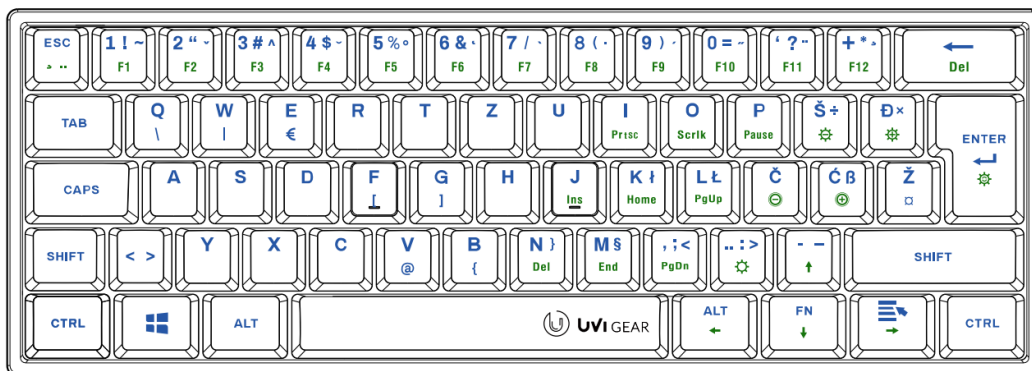

## Specifikacije

UVI Pride Nano ima skupno 62 tipk s popolno anti-ghosting funkcionalnostjo in RGB osvetlitvijo ter je ožičena s snemljivim kablom USB-C.

## Specifikacije

UVI Pride Nano ima ukupno 62 tipke s potpunom anti-ghosting funkcionalnošću i RGB osvjetljenjem te je žičana s odvojivim USB-C kabelom.

## Specification

UVI Pride Nano has a total of 62 full anti-ghosting keys with RGB lighting and is wired with a USB-C detachable cable.

# Tipke F1-F12 / Tipke F1-F12 / F1-F12 Keys

Fn + 1 = F1  
Fn + 2 = F2  
Fn + 3 = F3  
Fn + 4 = F4  
Fn + 5 = F5  
Fn + 6 = F6

Fn + 7 = F7  
Fn + 8 = F8  
Fn + 9 = F9  
Fn + 0 = F10  
Fn + ' = F11  
Fn + + = F12



# Druge bližnjice / Ostali prečaci / Other shortcuts

Fn + I = Prtsc

Fn + O = ScrLk

Fn + P = Pause

Fn + J = Ins

Fn + K = Home




Fn + L = PgUp

Fn + N = Del

Fn + M = End

Fn + , = PgDn

FN + Backspace = Del

-  Preklopi med smernimi tipkami in dejansko funkcijo
-  Prebaci između tipki sa strelicama i stvarne funkcije
-  Switch between arrow keys and the real function

## Osvetlitev / Osvjetljenje / Lighting

 Svetlost +/-

 Svjetlina +/-

 
 Brightness +/-




 Hitrost osvetlitve +/-

 Brzina osvjetljenja +/-


 Lighting running speed +/-



 Preklapljanje med 18 RGB načini

 Prebacivanje između 18 RGB načina

 
 Switch between 18 RGB modes



 Zamenjaj barve osvetlitve

 Promijeni boje osvjetljenja

  Switch lighting colors



## MacOS / MacOS / MacOS

 Preklopi med načinom Windows in MacOS

 Prebaci između Windowsa i MacOS-a

 Switch between Windows and MacOS

Fn + ALT-L (3 s)


 Svetlost zaslona -

 Svjetlina zaslona - Fn + 1

 Screen brightness -

 Svetlost zaslona +

 Svjetlina zaslona + Fn + 2

 Screen brightness +

 Nadzorna plošča

 Upravljačka ploča Fn + 3

 Open Mission Control

 Sistemske nastavitve


 Postavke sustava Fn + 4

 Controller

 Prejšnje

 Prethodno Fn + 7

 Previous

 Premor/Predvajaj

 Pauza/Reproduciraj Fn + 8

 Pause/Play

 Naslednje

 Sljedeće Fn + 9

 Next

 Utišaj

 Isključi zvuk Fn + 0

 Mute

 Glasnost -

 Glasnoća - Fn + '

 Volume -

 Glasnost +

 Glasnoća + Fn + +

 Volume +

# Dodatni podatki / Dodatni podaci / Additional data

## Dodatni podatki

Število tipk: 62

Dimenzije: 293,6 × 103,6 × 39,5 mm

Tip stikala: Mehansko

Življ. doba: 60 mil. klikov

Anti-ghosting za vse tipke

Zamenljiva stikala

## Dodatni podaci

Broj tipki: 62

Dimenzije: 293,6 × 103,6 × 39,5 mm

Vrsta prekidača: Mehanički

Vijek traj.: 60 milijuna klikova

Anti-ghosting za sve tipke

Zamjenjivi prekidači

## Additional data

Number of keys: 62

Size: 293,6 × 103,6 × 39,5 mm

Switch type: Mechanical

Lifetime: 60 million clicks

All keys Anti-ghosting

Replaceable switches

# Opozorilo / Opomena / Warning

## Opozorilo

Tipkovnice ne poskušajte odpirati, popravljati ali modificirati. Tipkovnico čistite samo z uporabo suhe krpe; ne uporabljajte alkohola ali detergenta. Izogibajte se stiku z vodo in odprtim ognjem ter je ne izpostavljajte visokim temperaturam.

## Opomena

Ne pokušavajte otvarati, popravljati ili modificirati tipkovnice. Čistite tipkovnicu samo suhom krpom; ne koristite alkohol ili deterdžent. Izbjegavajte kontakt s vodom ili otvorenim plamenom i ne izlažite visokim temperaturama.

## Warning

Do not attempt to open, service or modify the keyboard. Clean the keyboard using only a dry cloth; do not use alcohol or detergent. Keep away from water or fire and do not expose to high temperatures.



**Thank you for choosing UVI Pride Nano.**