


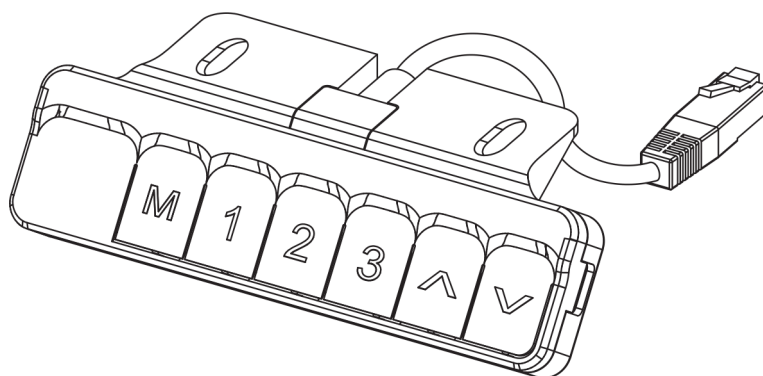

# Lite Controller


Vodič za uporabo  
*User Manual*



Ostali vodiči za sestavo so na voljo na [UVI.gg/ag](https://uvi.gg/ag) ali preko QR kode!  
*Other Assembly Guides are available at [UVI.gg/ag](https://uvi.gg/ag) or via the QR code!*



## Upravljanje nadzorne plošče / Operating the Control Panel

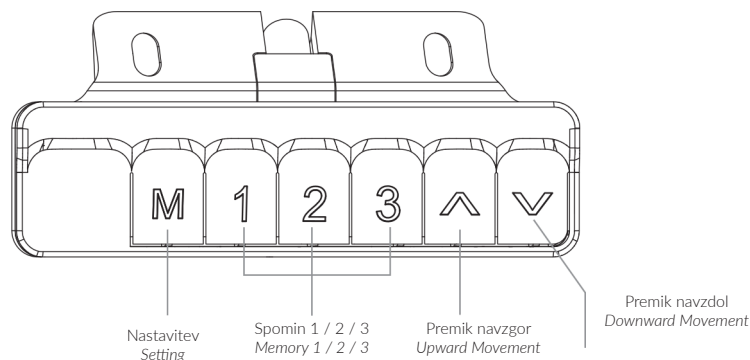

### Opomba / Note:

Pri prvi uporabi mize morate izvesti ponastavitev sistema.  
*When using the desk for the first time, you must reset the system.*

### Ponastavitev sistema / Resetting the System

Če sistem nepravilno deluje ali se na upravljalni plošči prikaže »RST«, je potrebna ponastavitev.

Postopek ponastavitve:

- Pritisnite in držite gumb za premik navzdol, dokler se motor ne ustavi, nato gumb spustite.
- Ponovno pritisnite in držite gumb za premik navzdol še 5 sekund. Sistem bo samodejno vstopil v način ponastavitve.  
**Pomembno:** Gumba ne spustite prezgodaj, sicer bo sistem izstopil iz načina ponastavitve.
- Ko je ponastavitev končana, se zasliši zvočni signal.

Če je miza že na najnižjem položaju, vendar se način ponastavitve ne aktivira, pritisnite in 10 sekund držite gumba za premik navzgor in premik navzdol hkrati, da prisilno vstopite v način ponastavitve. Nato držite gumb za premik navzdol za začetek ponastavitve.

*If the system malfunctions or the control panel displays "RST", a system reset is required.*

*System reset procedure:*

- *Press and hold the "Downward Movement" button until the motor stops, then release the button.*
- *Press and hold the "Downward Movement" button again for 5 seconds. The system will automatically enter reset mode.*  
**Important:** *Do not release the button early, or the system will exit reset mode.*
- *When the reset process is complete, you will hear a beep.*

*If the desk has reached its lowest position but reset mode does not activate automatically, press and hold the Upward Movement and Downward Movement buttons simultaneously for 10 seconds to force entry into reset mode. Then press and hold the "Downward Movement" button to begin the reset.*

### Nastavitev višine / Height Adjustment

Držite gumb za premik navzgor / navzdol, da dvignete ali spustite mizo na željeno višino. S kratkim pritiskom na gumb za premik navzgor / navzdol lahko opravite natančne nastavitve.

*Press and hold the Upward / Downward Movement button to raise or lower the desk to the desired height. Short-press the Upward / Downward button for precise adjustments.*

### Shranjevanje položajev / Memory Setting

Za shranjevanje položaja:

1. Pritisnite gumb »M«. Na prikazovalniku se prikaže »S-«, črtica pa začne utripati.
2. Pritisnite gumb 1 / 2 / 3, da shranite trenutni položaj v izbrani pomnilnik.

Na voljo sta dva načina priklica shranjenih položajev:

- Avtomatski način (S-6 nastavljen na »1«)
- Polavtomatski način (S-6 nastavljen na »0«)

Priklic položaja v **avtomatskem načinu (S-6 = 1)**:

- Enkrat pritisnite gumb 1 / 2 / 3.
- Na zaslonu se prikaže shranjena višina, miza pa se samodejno začne premikati na ta položaj.
- Zaustavite gibanje s pritiskom katerega koli gumba.

Priklic položaja v **polavtomatskem načinu (S-6 = 0)**:

- Pritisnite in držite gumb 1 / 2 / 3.
- Na zaslonu se prikaže shranjena višina in miza se začne premikati na ta položaj.
- Ko gumb spustite, se gibanje ustavi.

To store a memory position:

1. Press the "M" button. The display will show "S-", and the dash "-" will flash.
2. Press 1 / 2 / 3 to save the current height to that memory slot.

There are two modes for recalling a memory position:

- Automatic mode (S-6 is set to "1")
- Semi-automatic mode (S-6 is set to "0")

To recall a stored position in **automatic mode (S-6 = 1)**:

- Press 1 / 2 / 3 once.
- The display will show the height of the selected memory position and the desk will automatically move to that height.
- Press any button to stop movement.

To recall a stored position in **semi-automatic mode (S-6 = 0)**:

- Press and hold the 1 / 2 / 3 button.
- The display will show the stored height and the desk will begin moving toward that position.
- Release the button to stop movement.

#### Način varčevanja z energijo / Power-Saving Mode

Sistem bo prešel v način varčevanja z energijo, zaslon pa se bo izklopil, če več kot 1 minuto ne pritisnete nobenega gumba. Za ponovni vklop upravljalne plošče se dotaknite kateregakoli gumba.

The system will enter power-saving mode and the display will turn off if no buttons are pressed for over 1 minute.

Touch any button to wake up the control panel.

#### Vodnik za prilagojeno programiranje / Custom Programming Guide

- Pritisnite in 5 sekund držite gumb »M«, da vstopite v način nastavitvev. Na zaslonu se bo prikazalo »S-x«, pri čemer bo »x« utripal.
- Z gumboma za premik navzgor / navzdol preklapljate med različnimi nastavitvami, z enkratnim pritiskom na »M« pa vstopite v posamezno nastavev.
- Po prilagoditvi nastavitve ponovno pritisnite »M«, da jo shranite.

- Press and hold the "M" button for 5 seconds to enter the setting mode. The display will show "S-x", and the "x" will flash.
- Press the upward / downward movement buttons to switch between different settings, and press the "M" button once to enter a selected setting.
- After adjusting the setting, press "M" again to save.

Naslednje nastavitve je mogoče prilagoditi / The following settings can be customized:

|     |                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S-1 | Preklop med cm in inch - "0" = metrične enote (cm), "1" = imperialne enote (inch).<br>Switch between cm and inch - "0" = metric units (cm), "1" = imperial units (inch).                                                                                                                                                                                                                               |
| S-2 | Ta funkcija trenutno ni na voljo.<br>This function is currently unavailable.                                                                                                                                                                                                                                                                                                                           |
| S-3 | Nastavitev občutljivosti proti trkom (senzor toka – pomik navzgor) - "0" = izklopljeno, "1" = najmanj občutljivo, "8" = najbolj občutljivo.<br>Adjust anti-collision sensitivity (current sensor – upward movement) - "0" = off, "1" = least sensitive, "8" = most sensitive.                                                                                                                          |
| S-4 | Nastavitev občutljivosti proti trkom (senzor toka – pomik navzdol) - "0" = izklopljeno, "1" = najmanj občutljivo, "8" = najbolj občutljivo.<br>Adjust anti-collision sensitivity (current sensor – downward movement) - "0" = off, "1" = least sensitive, "8" = most sensitive.                                                                                                                        |
| S-5 | Nastavitev prikazane višine najnižje pozicije.<br>Adjust the displayed height of the lowest position.                                                                                                                                                                                                                                                                                                  |
| S-6 | Preklop med samodejnim načinom (S-6 = "1") in pol-samodejnim načinom (S-6 = "0").<br>Switch between automatic mode (S-6 = "1") and semi-automatic mode (S-6 = "0").                                                                                                                                                                                                                                    |
| S-7 | Nastavitev toplotne zaščite:<br>"0" = izklop 2-minutnega / 18-minutnega delovnega cikla za zaščito pred pregrevanjem (ni priporočeno)<br>"1" = vklop 2-minutnega / 18-minutnega delovnega cikla.<br><br>Thermal protection setting:<br>"0" = turn off the 2-minute / 18-minute work cycle system overheating protection (not recommended).<br>"1" = enable the 2-minute / 18-minute work cycle system. |
| S-8 | Ta funkcija trenutno ni na voljo.<br>This function is currently unavailable.                                                                                                                                                                                                                                                                                                                           |

## Vodnik za odpravljanje težav / Troubleshooting Guide

Ta priročnik za popravila vam bo pomagal prepoznati in odpraviti manjše težave, ki jih povzroča nenavadno delovanje električnega sistema naše mize. Če vam spodnja navodila ne pomagajo rešiti težave, se obrnite na prodajno mesto, kjer ste mizo kupili, da prejmete servisno pomoč ali zamenjavo delov.

*The repair guide intends to help you identify and solve the minor problems caused by unusual operation of the electric system of our sit-stand desk. If the following guides can't help solve the problems, please contact your point of purchase for service and replace the accessories.*

| Error | Opis / Description                                                                                                                                                                                                                                                                                                | Postopek reševanja / Handling descr.                                                                                                                                                                    |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E01   | Napetost napajanja je previsoka.<br><i>The power supply voltage is too high.</i>                                                                                                                                                                                                                                  | Preverite napajalnik.<br><i>Check the power supply.</i>                                                                                                                                                 |
| E02   | Stebri se ne premikajo usklajeno.<br><i>The columns do not move together.</i>                                                                                                                                                                                                                                     | Ponastavite sistem.<br><i>Reset the system.</i>                                                                                                                                                         |
| E04   | Kontrolna plošča ni povezana.<br><i>The control panel is disconnected.</i>                                                                                                                                                                                                                                        | Preverite priključek.<br><i>Check the connection.</i>                                                                                                                                                   |
| E05   | Sistem za izogibanje trkom se je aktiviral.<br><i>Collision avoidance system has been activated.</i>                                                                                                                                                                                                              | Izključite in ponovno priključite kontrolno ploščo.<br><i>Unplug the control panel and plug it back in to check the connection.</i>                                                                     |
| E06   | Zaradi prenizke napetosti napajanja se sistem ne zažene.<br><i>Failure to start due to low power supply voltage.</i>                                                                                                                                                                                              | Zamenjajte napajalnik ali izključite ter ponovno priključite napajanje.<br><i>Replace the power supply, or unplug and reconnect the power to check the connection.</i>                                  |
| E07   | Krmilnik preide v zaščitni način zaradi prenizke napetosti.<br><i>Controller enters protective mode due to low voltage.</i>                                                                                                                                                                                       | Izključite napajanje in ga ponovno priključite.<br><i>Unplug the power and reconnect it.</i>                                                                                                            |
| E08   | Miza se med delovanjem nagne.<br><i>The desk tilts during operation.</i>                                                                                                                                                                                                                                          | Ponastavite sistem.<br><i>Reset the system.</i>                                                                                                                                                         |
| HOT   | Napajalnik se pregreje ali pa se aktivira zaščita pred pregrevanjem, ker je sistem v razponu 18 minut neprekinjeno deloval več kot 2 minuti.<br><i>The power supply overheats, or overheat protection activates because the system was operated for more than 2 cumulative minutes within a 18-minute period.</i> | Pustite, da se ohladi, ali prenehajte z uporabo mize in jo pustite v mirovanju približno 18 minut.<br><i>Let it cool down, or stop using the desk and allow it to remain idle for about 18 minutes.</i> |
| E12   | Prišlo je do električne okvare.<br><i>An electrical problem has occurred.</i>                                                                                                                                                                                                                                     | Zamenjajte kontrolno ploščo.<br><i>Replace the control panel.</i>                                                                                                                                       |
| E13   | Kabli motorja so morda poškodovani.<br><i>Motor wires may be damaged.</i>                                                                                                                                                                                                                                         | Izključite in ponovno priključite kable motorja.<br><i>Unplug and reconnect the motor wires to check the connection.</i>                                                                                |
| E15   | Kratek stik.<br><i>Short circuit.</i>                                                                                                                                                                                                                                                                             | Zamenjajte motor.<br><i>Replace the motor.</i>                                                                                                                                                          |
| E16   | Motor ne deluje.<br><i>Motor fails to operate.</i>                                                                                                                                                                                                                                                                | Ponastavite sistem.<br><i>Reset the system.</i>                                                                                                                                                         |
| E18   | Zaznana je preobremenitev.<br><i>Overload detected.</i>                                                                                                                                                                                                                                                           | Odstranite predmete iz delovne površine.<br><i>Remove items from the desktop.</i>                                                                                                                       |
| E42   | Spomina ni mogoče prebrati.<br><i>Memory cannot be read.</i>                                                                                                                                                                                                                                                      | Zamenjajte krmilno enoto.<br><i>Replace the control box.</i>                                                                                                                                            |